

Article: 7001BA0012

Description: Float tap low connection in plastic material with ball 1/2".

Material: polypropylene

Working temperature: -5°C +30°C (cold water)

Working pressure range: 2 / 10 bar

Origin: made in Italy.


Article net weight: 193 g $\pm$ 5%

Packing: single plastic bag.
60 Pcs in box 54x37x47.

Packaging gross weight: 12,76 kg $\pm$ 5%



Image only for illustration purposes.

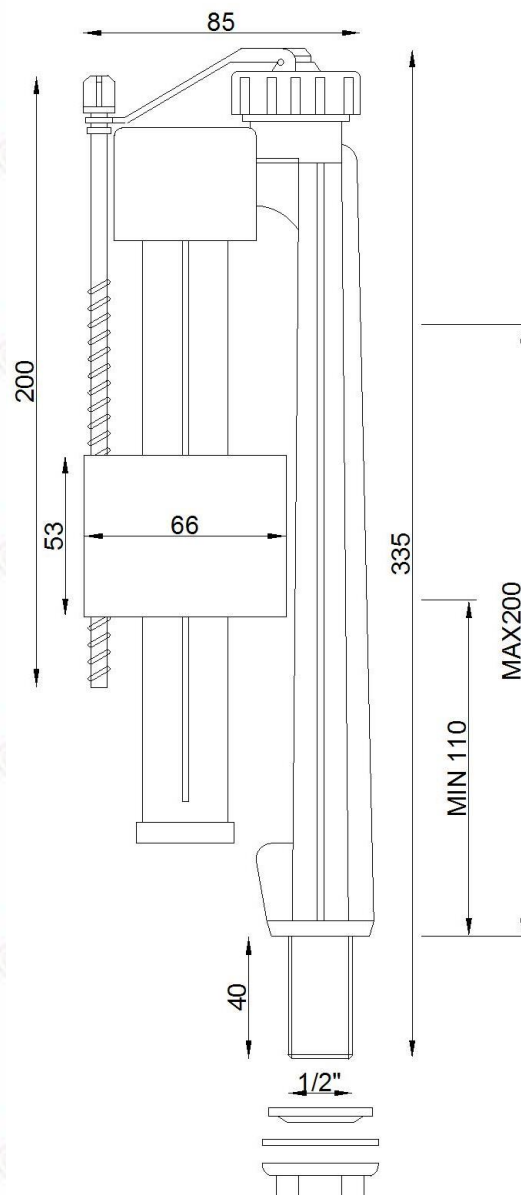

The company Go Plast srl reserves the right to make modifications without prior notice. Any reproduction, even partial, is strictly prohibited.


Telephone number: +39 0321 960614 - Fax: +39 0321 960625

Email: info@goplast.it

Via Gallarate, 116 – 28047 Oleggio (NO)

INSTALLATION INSTRUCTION

I、The profile of installation

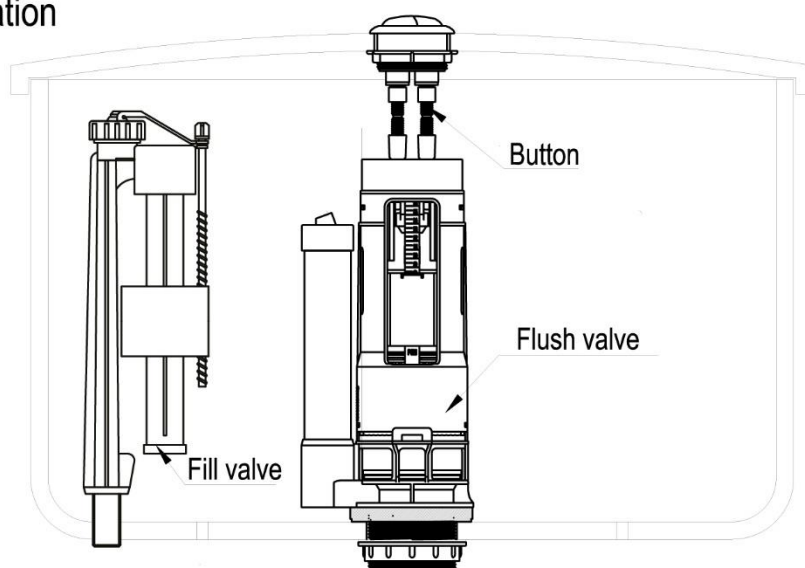


II、Steps


1>Preparation

Shut water off,flush toilet to empty tank,and remove old toilet fill valve.

2>Installation

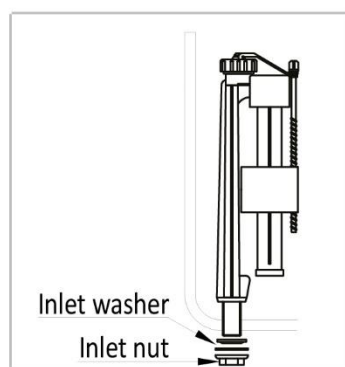

Take off the inlet nut and inlet washer, insert the inlet screw into the tank inlet hole (low connection), re-assemble the inlet nut and inlet washer, adjust the fill valve and tighten the nut.

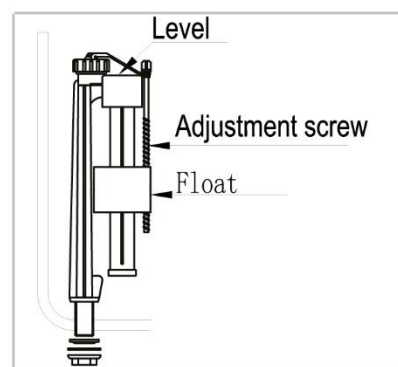

Water level adjustment:turn the adjustment screw by hand or with screw driver,move the float properly. The higher the float is,the higher the water level is.

III、Troubleshooting

No.	Issues	Possible Reasons	Solutions
1	Valve does not fill the tank	Supply line jamed or floats is held up in water stopping position	Clean debris in supply line, adjust the float position
2	Tank fills too much or only partially	Inproper position of floats	Turn the adjustment screw by hand or with screw driver,move the float to the properly. The higher the float is, the higher the water level is.
3	Inlet hole leaks	Inlet nut is loose or the ceramic hole is deformed.	Tighten the inlet nut or repair the ceramic toilet.
4	Takes too long/short time to fill the tank	The pressure of supply line is too low/high.	Adjust the pressure of supply line

Please keep the instruction for future use.

Products may be amended in line with continuous improvement,please refer to actual product.